

PRESTO LG HIGH BUILD FILLER



RECOMMENDED USES

PRODUCT FEATURES







PRESTO LG

TECHNICAL DATA

Colour Shades Grey

Can sizes 3 l, 10 l, 15 l

Application method Apply with a smoothing trowel.

Shrinkage Minimal.

Volume solids (%) 46

Special feature The light filling material used in this filler makes it light and easy to apply.

Storage Must be protected from frost. Store in a dry and cool place, protected from sunlight.

The opened container does not withstand long-term storage.

The above information is not intended to be exhaustive or complete. The information is based on laboratory tests and practical experience, and it is given to the best of our knowledge. The quality of the product is ensured by our operational system, based on the requirements of ISO 9001 and ISO 14001. As manufacturer we cannot control the conditions under which the product is being used or the many factors that have an effect on the use and application of the product. We disclaim liability for any damages caused by using the product against our instructions or for inappropriate purposes. We reserve the right to change the given information unilaterally without notice.



PRESTO LG

APPLICATION INSTRUCTIONS

Surface preparation

Unpainted surfaces:

Clean the surfaces by removing any grease and dirt. Remove any dust and loose material by brushing.

Previously painted surfaces:

Wash previously painted surfaces with Maalipesu cleaning agent. Let the surface dry before further treatment. Remove as much loose paint as you can with a scraper and sand painted surfaces to a matte finish. Remove the sanding dust.

Cleaning of tools

Clean tools with water.

Environmental protection and waste disposal

Deliver empty packaging and hardened mortar to a recycling point or waste tip according to local regulations.

Health and Safety


Wear protective gloves. Contains 1,2-benzisothiazol-3(2H)-one (BIT) and reaction mass of 5-chloro-2-methyl-2H-isothiazol-3-one and 2-methyl-2H-isothiazol-3-one (3:1) (C(M)IT/MIT (3:1)). May produce an allergic reaction. This product contains a biocidal product for the preservation of the product during storage. Contains: reaction mass of 5-chloro-2-methyl-2H-isothiazol-3-one and 2-methyl-2H-isothiazol-3-one (3:1) (C(M)IT/MIT (3:1)).

The above information is not intended to be exhaustive or complete. The information is based on laboratory tests and practical experience, and it is given to the best of our knowledge. The quality of the product is ensured by our operational system, based on the requirements of ISO 9001 and ISO 14001. As manufacturer we cannot control the conditions under which the product is being used or the many factors that have an effect on the use and application of the product. We disclaim liability for any damages caused by using the product against our instructions or for inappropriate purposes. We reserve the right to change the given information unilaterally without notice.



PRESTO LG

EN 15824:2009

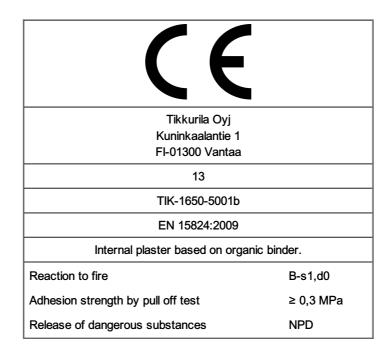

The above information is not intended to be exhaustive or complete. The information is based on laboratory tests and practical experience, and it is given to the best of our knowledge. The quality of the product is ensured by our operational system, based on the requirements of ISO 9001 and ISO 14001. As manufacturer we cannot control the conditions under which the product is being used or the many factors that have an effect on the use and application of the product. We disclaim liability for any damages caused by using the product against our instructions or for inappropriate purposes. We reserve the right to change the given information unilaterally without notice.

